


Starting the washing program

1. Put the laundry in the washing machine and the detergent in the detergent compartment.
2. Close the washing machine door and close the detergent compartment.
3. Rotate the program selector knob to selected program and adjust the temperature selector knob accordingly (see program chart below).
4. Press the ON/OFF button . The appliance door will lock, and the washing machine will start working.
5. After the end of the washing program, press the ON/OFF button, open the door and take out the washed laundry.

!!! Always observe the instructions and suggested temperature indicated on the clothing. !!!

Program	Temperature	Program name	Program description
A	95°C	Cotton white	Prewash and wash (longest program). For towels and bed linen.
A	60°C	Cotton white / color	Prewash and wash (longest program). For towels and bed linen.
A	40°C	Color	Prewash and wash (longest program). For towels and bed linen.
B	95°C	Cotton white	Wash only (no prewash). For white cotton laundry, towels, bed linen, T-shirts ...
B	60°C	Cotton white / color	Wash only (no prewash). For white and color cotton laundry, towels, bed linen, T-shirts ...
B	40°C	Color	Wash only (no prewash). For color cotton laundry, towels, bed linen, T-shirts ...
C-D	40°C - 60°C	Color	Program for colored laundry made of cotton. Observe the instructions indicated on the clothing.
E		Rinsing	
F		Softening	
G		Spinning	
H-J	40°C - 60°C	Mix Synthetics	Delicate washing program for sportswear made of cotton, microfibers and synthetic fibers, at lower spinning rates and a brief final spinning cycle.
K	40°C	Sensitive	For washing clothes requiring special care. Observe the instructions indicated on the clothing.
L	30°C	Wool	Delicate washing program for washing wool, silk. Observe the instructions indicated on the clothing.
M		Rinsing	
N		Softening	
P		Pumping, short spin	